


5 x 6 Economy 12 Ft Stand

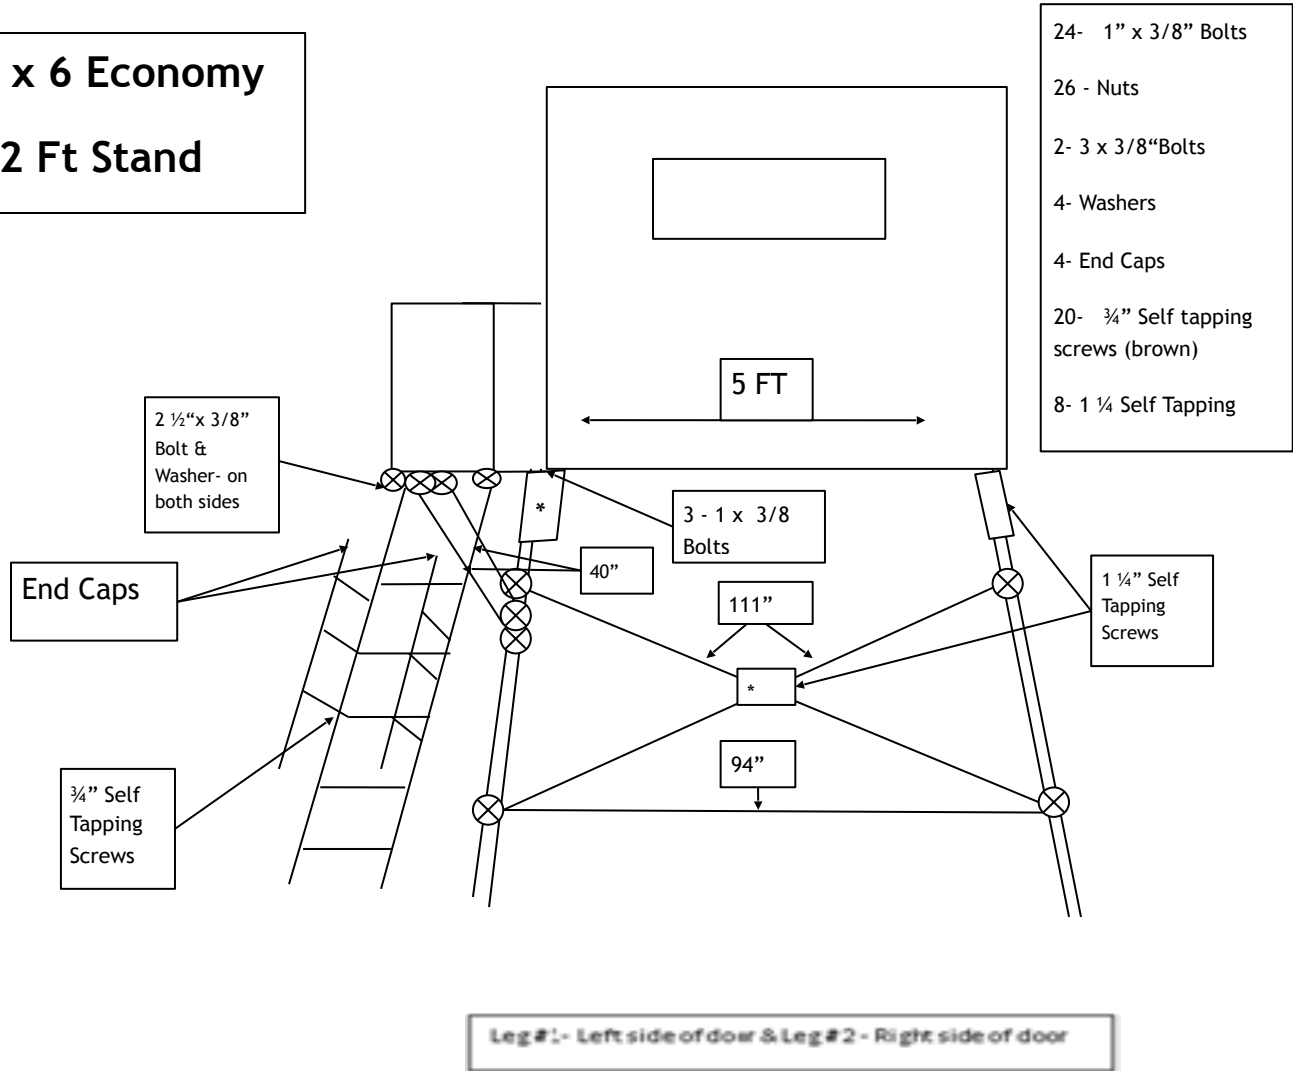

Braces: 4-118 1/2, 2-104, 4-111, 2-94 &

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

