


6 x 10 – 15 FT. Stand Insulated Blind

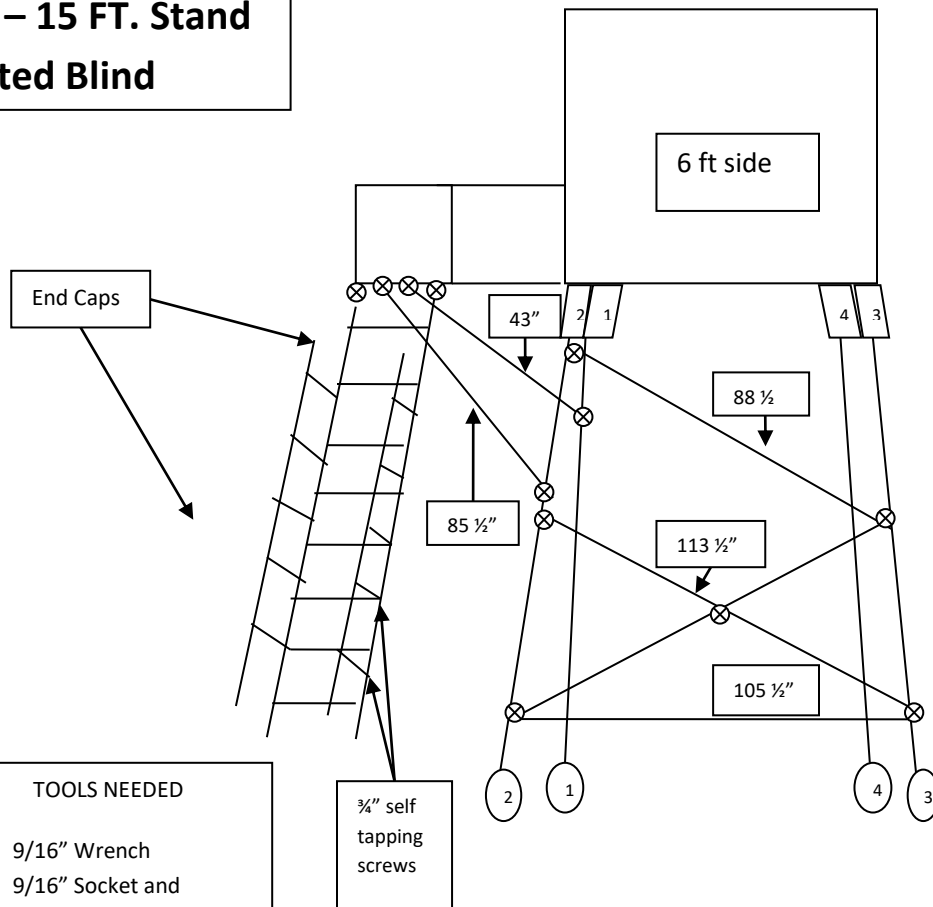

- 37 - 1" X 3/8" Bolts
- 39 - Nuts
- 4 - Washers
- 2 - 3" X 3/8" Bolts
- 34 - 3/4" self tapping screws (brown)
- 5 - 1/4" self tapping screws (silver)
- 4 - End Caps

- TOOLS NEEDED**
- 9/16" Wrench
 - 9/16" Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill

Braces: 1-43", 1-85 1/2", 2-88 1/2", 2-105 1/2", 4-113 1/2", 4-128 1/2", 4-159", 2-160 1/2"

- Raise blind and slide in Legs
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Leg #1- 85 1/2" Brace to bottom of Platform
Leg #2-58" Brace to side of Platform
- Use 6 of the 3/4" self tapping screws for the top step extension.

