


**6 x 8 –15 Ft. Stand
Insulated Blind**

End Caps

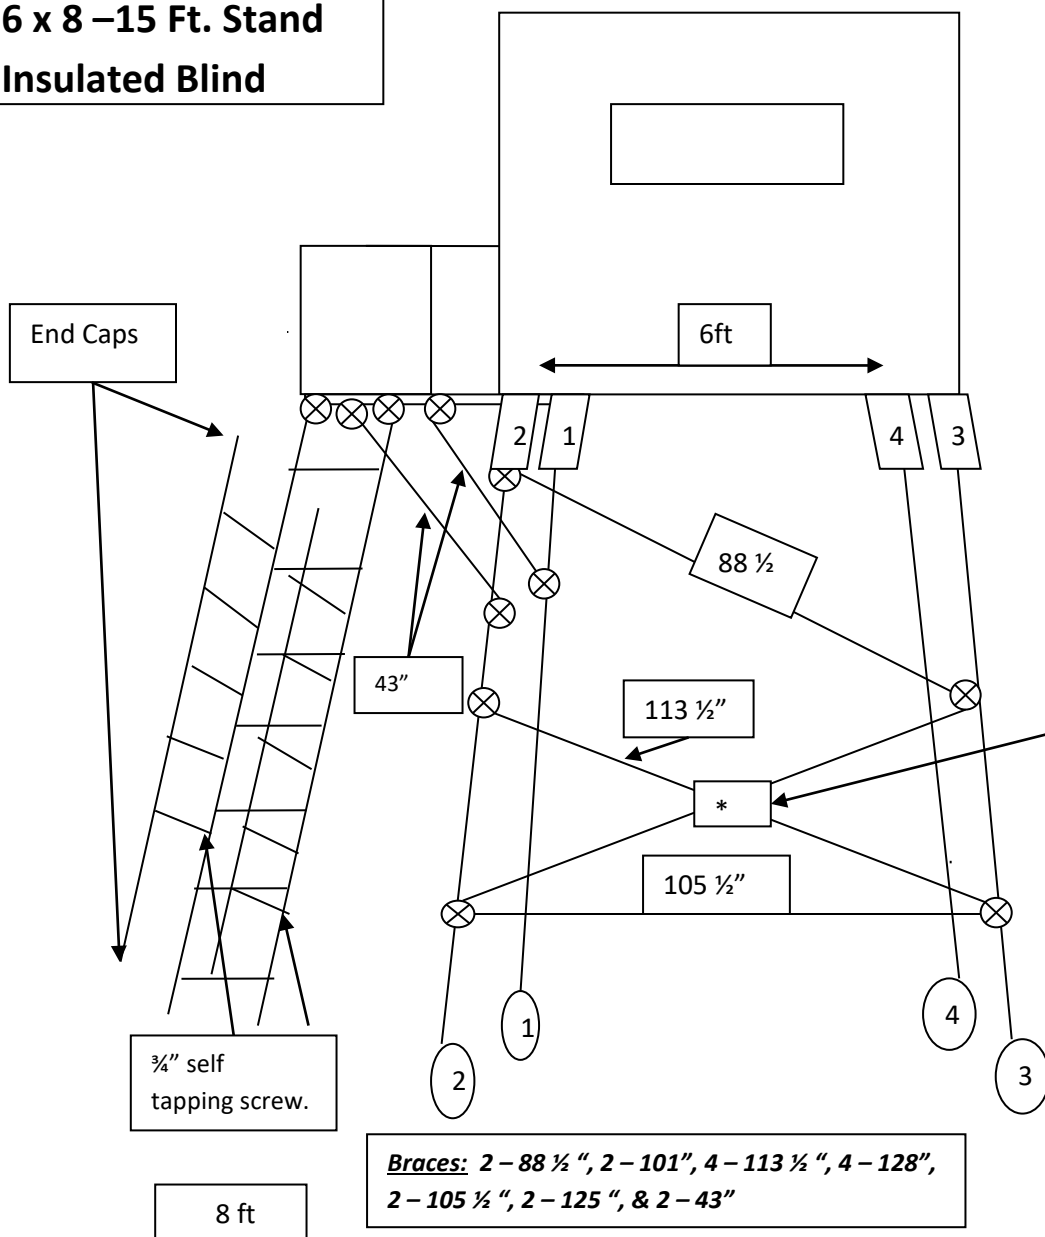


- 29- 1 ¼" x 3/8" Bolts
- 31- Nuts
- 2- 3" x 3/8" Bolts
- 4- Washers
- 4- End Caps
- 34-3/4" self tapping screw (brown)
- 4- ¼ x 1 ¼ self tapping screw (silver)

Drill ¼" hole in outside brace and use ¼" x 1 ¼" self tapping screw to hold both braces together.

- TOOLS NEEDED**
- 9/16" Wrench
 - 9/16" Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill

Braces: 2 – 88 ½", 2 – 101", 4 – 113 ½", 4 – 128", 2 – 105 ½", 2 – 125", & 2 – 43"

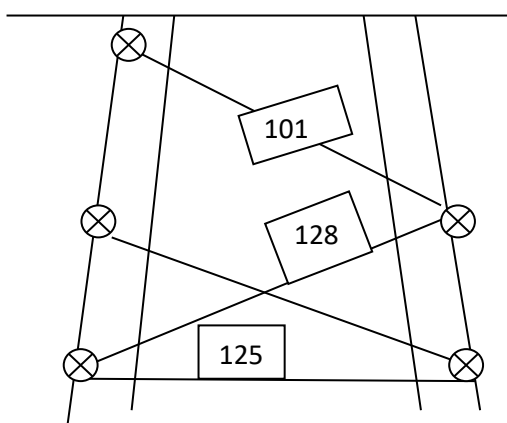

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Install 43" braces from leg#1 & #2 to Platform using 3/8" bolt.
- Use 6 of the ¾" self tapping screws for the top step extension.
- Left & Right handrail for ladder install with self tapping screws.
- X - Marks 1" x 3/8" Bolts.
- 6- ¾" self tapping screws are for the top step extension.
- Staircase takes 3" Bolts w/washers

8' side base measurement leg #1 to #2 and #3 to #4 legs measures 141"
6' side base measurement leg #1 to 4 and #2 to #3 legs measures 121"(Complete pad-22'x14')