


**8 x 8 -10 Ft. Stand  
Insulated Blind**

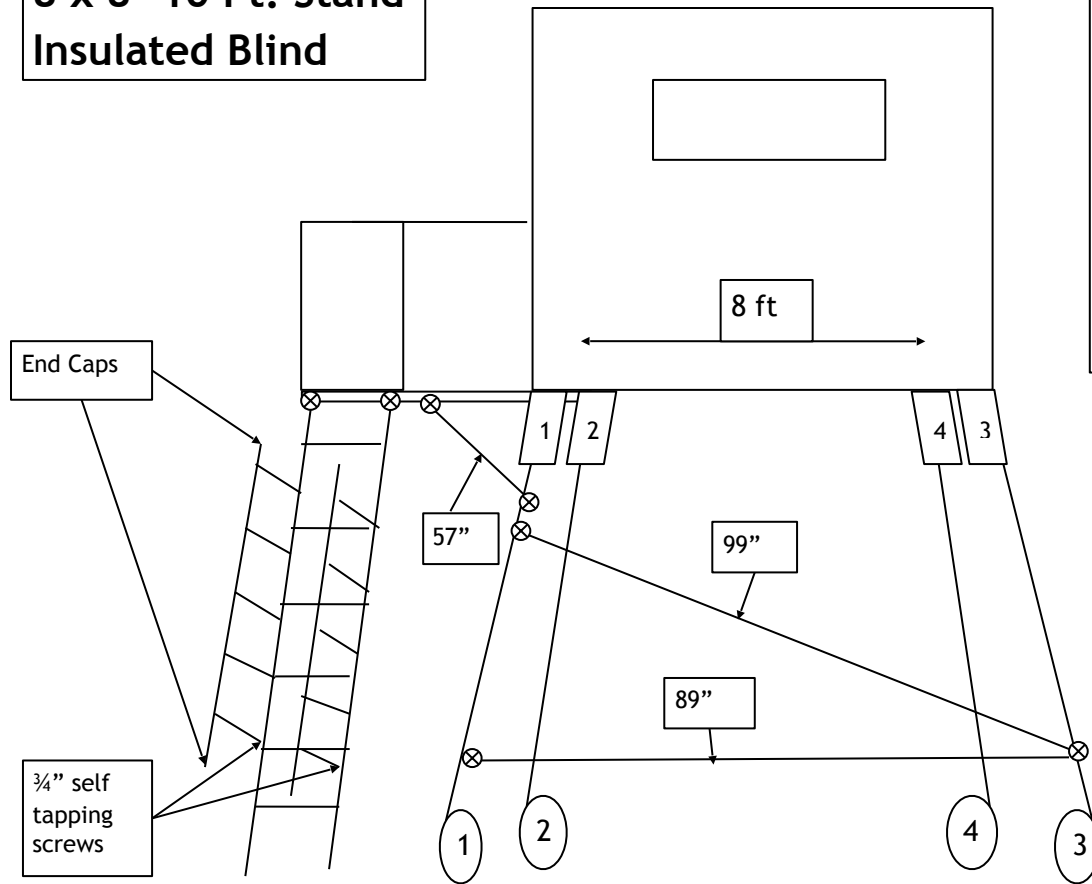

- 24- 1 1/4" x 1/2" Bolts
- 24- Nuts
- 22- 3/4" self tapping screws (brown)
- 4 - Washers
- 4 - End Caps
- 2- 3/8" Nuts

For Slab: 107 1/2" from center leg to center leg

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 1/2" Bolts
- Install 57" braces from leg#1 & #2 to Platform using 1/2" bolt.

- TOOLS NEEDED**
- 3/4" Wrench
  - 3/4" Socket and Ratchet